

Monteringsanvisning Assembly instructions

50R120080
50R140080
50R150090
50R160080
50R160090
50R180080

50R180090
50R180100
50R200080
50R200090
50R200100

FUMAC®


A

x 8



B

x 8


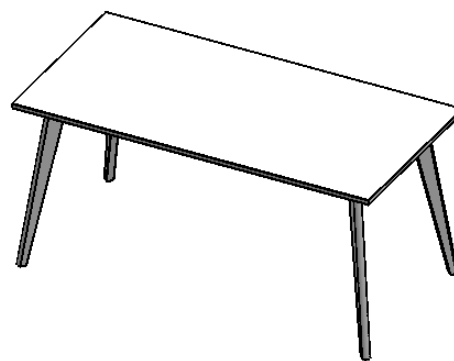


1.



B

A

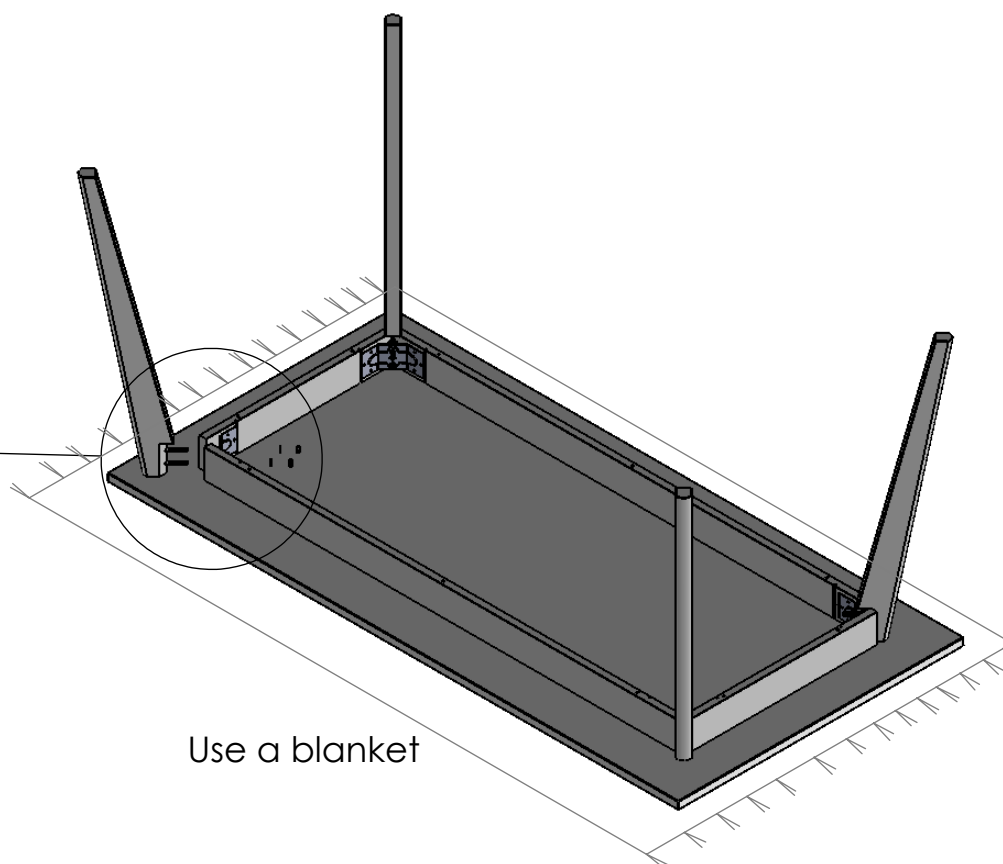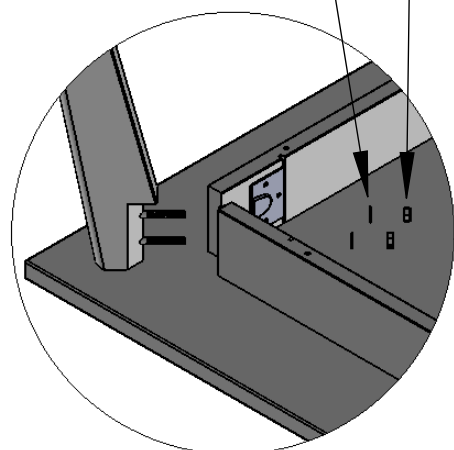

Use a blanket

2.

